

PUBLIC SAFETY DIVISION

GO RHINO! PRODUCTS

PARTITION INSTALLATION INSTRUCTIONS

2013 Ford Explorer / Part Number 570711

Do not attempt to install this product on any vehicle other than the one it is designed for and listed above!

PARTS LIST

QTY PART DESCRIPTION

1	5700W Partition Assembly
1	57961 Driver B-Pillar Bracket
1	57962 Passenger B-Pillar Bracket
1	57911 Driver Lower Filler Panel
1	57912 Passenger Lower Filler Panel
1	57951 Driver Upper Filler Panel
1	57952 Passenger Upper Filler Panel
4	M6 x 30MM Button Head Hex Bolt

QTY PART DESCRIPTION

1	57971 Driver Foot Bracket Assembly
1	57972 Passenger Foot Bracket Assembly
6	1/4" X 1/2" Nylon Slot Head Screw
4	1/4" X 1/2" Flange Head Socket Screw
4	3/8" Flat Washer
2	3/8" X 1" Hex Bolt
2	3/8" Lock Washer
2	3/8" Hex Nut

INSTALLATION


READ THE INSTALLATION INSTRUCTIONS COMPLETELY BEFORE YOU BEGIN THE INSTALLATION

Step-1 Adjust the front seats to the forward position.

Step-2 Beginning with the passenger side remove the (2) screws securing the grab handle to the B-pillar using a ratchet wrench and 7m socket. **Photo #1**

Step-3 Remove the grab handle and position the passenger side B-pillar bracket up to the B-pillar, align the holes in the bracket with the threaded inserts used to attach the grab handle, then secure the B- pillar bracket using (2) M6 x 30mm screws. Leave the screws loose for final adjustment. **Photo #2**



Note: The grab handle will not be reinstalled.

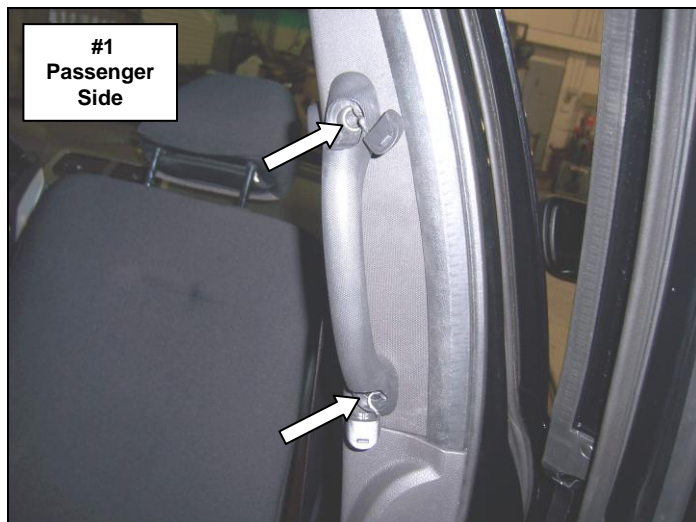

Step-4 Remove the passenger side outer seat track mounting bolt using a ratchet wrench and 13m socket. **Photo #3**

Step-5 Slide the front of the passenger side foot bracket under the seat track, and the rear of the bracket under the door jamb trim then reinstall the seat track bolt. Leave the seat track bolt loose for final adjustment. **Photo #4**


Repeat the above steps to install the driver side B-pillar bracket and foot bracket.

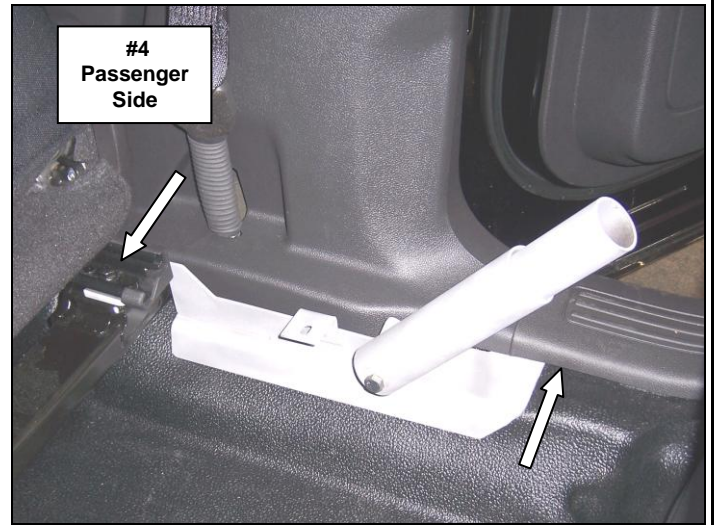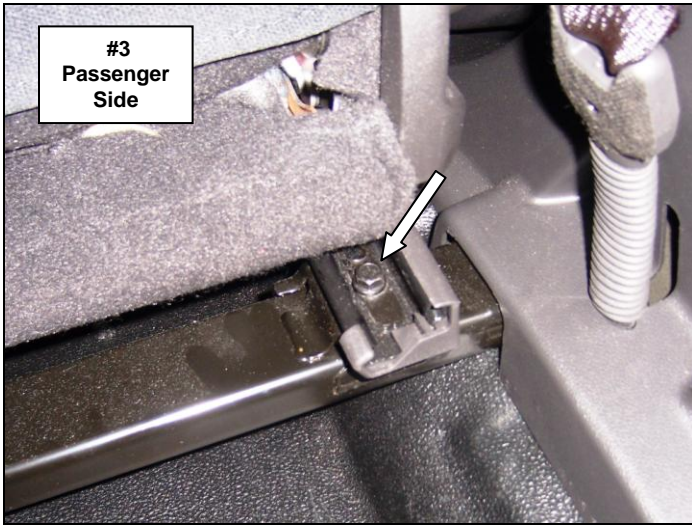


Step-6 With assistance move the partition into the vehicle through the rear door. Lean the partition back, align the partition legs with the foot brackets then slide the partition legs over the foot bracket stub tube. **Photo #5**

Step-7 Pivot the partition forward on the foot brackets and align the center slotted hole in the partition mounting tabs with the B-pillar brackets. Attach each of the partition mounting tabs to the B-pillar brackets using (1) 3/8" x 1" hex bolt, (2) 3/8" flat washers, (1) 3/8" lock washer and (1) 3/8" hex nut. **Photo #6**

Tighten the B-pillar bracket nuts and bolts, stub tube nuts and bolts, and seat track bolts.


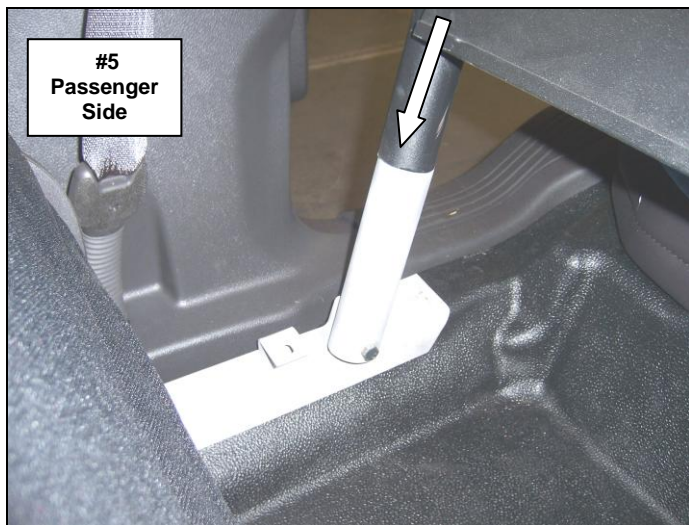


Step-8 Attach the passenger side lower filler panel to the mounting tabs using (2) 1/4" x 1/2" flange head screws. **Photo's #7 & #8**

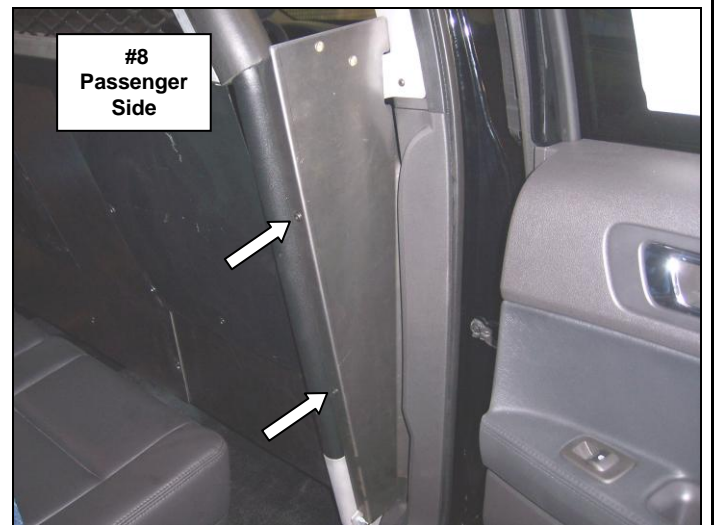

Step-9 Attach the passenger side upper filler panel to the mounting tab and to the lower filler panel using (3) ¼" x ½" nylon slot head screws. **Photo's #9 & #10**

Repeat the above steps to install the driver side upper and lower filler panel.

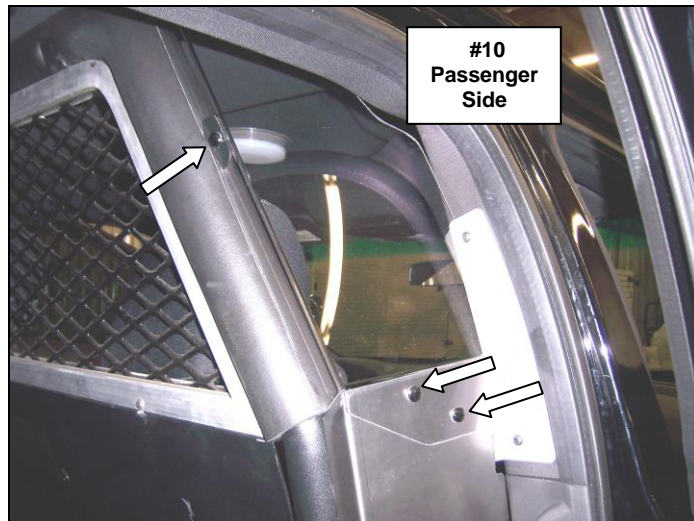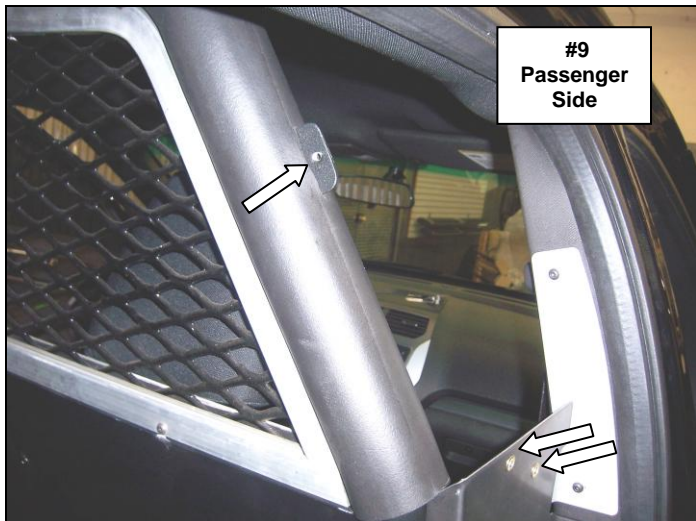

**FOR TECHNICAL OR WARRANTY INFORMATION CALL:
TOLL FREE (888)427-4466 FAX (714)672-0278
GO RHINO! Products® 591 W. Apollo St. Brea, CA 92821**