
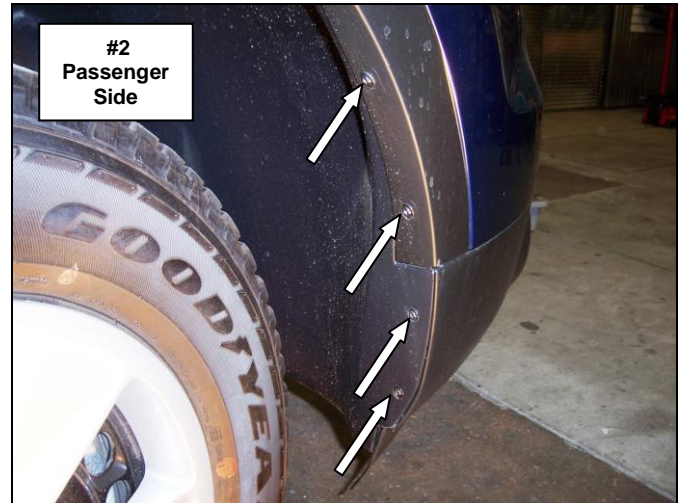




Front Bumper Fascia Removal

Step-1 Open the hood, locate and remove the (7) hex bolts and (2) plastic connectors securing the radiator cover and bumper fascia. **Picture #1**

Step-2 On each side, remove the (6) Phillips screws attaching the fender liner to the fascia. **Note:** (4) screws are on the outside, attaching the fender liner and fender flare to the fascia **Picture #2** and (2) screws are under the fender flare, attaching the fascia to the fender. **Picture #3**

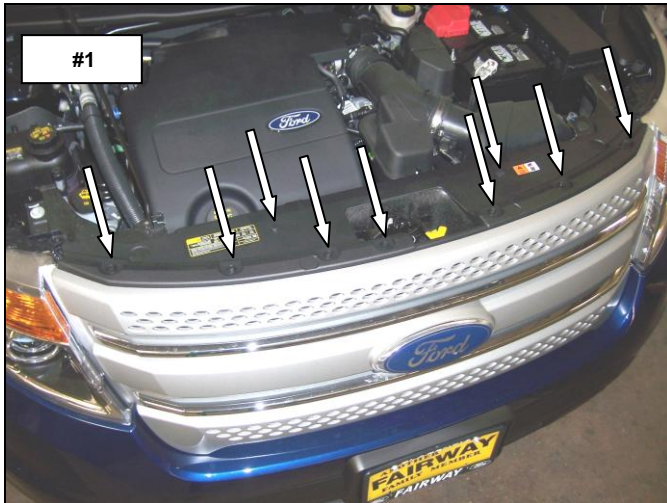



Step-3 Remove the (9) hex bolts attaching the fascia to the core support and fender liner. **Note:** **Picture #4** shows the three Passenger side bolts and two center bolts only.

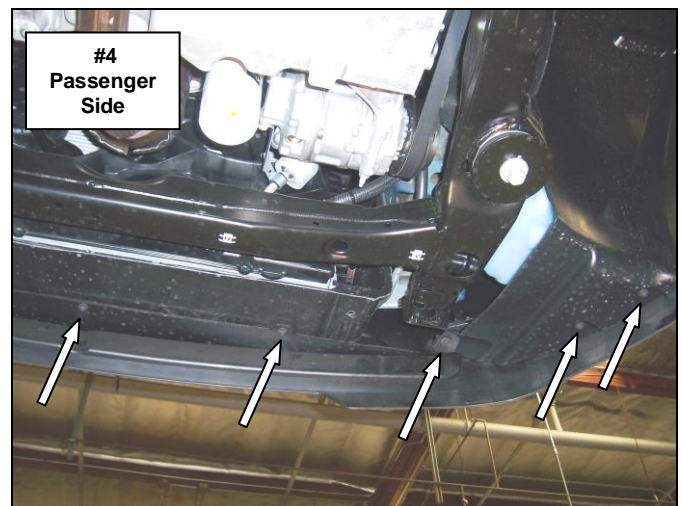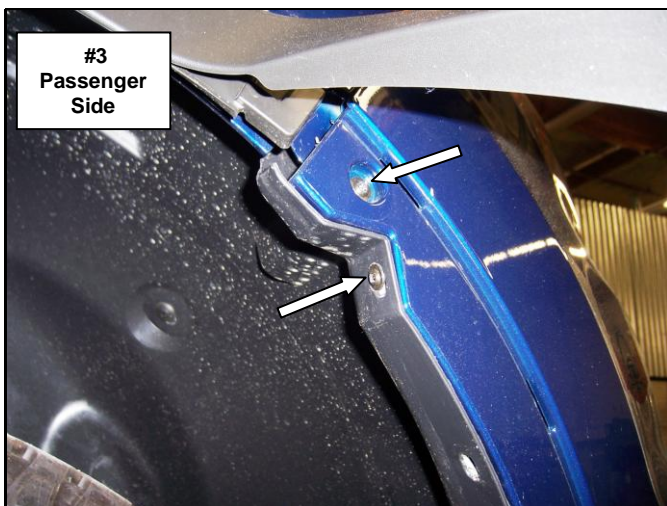

Step-4 With assistance pull out on the sides to release the corners of the bumper fascia and forward to remove it from the vehicle. **Note:** Unplug the fog lights and parking sensors, if the vehicle is so equipped.


Push Bumper Installation

Step-1 Beginning with the passenger side, assemble and attach one of the main and clamp brackets to the steel impact beam using (4) 3/8" X 1" hex bolts, (4) 3/8" lock washer and (4) 3/8" hex nuts. Position the top and bottom edge of the bracket assembly approximately 11 3/4" from the end of the impact beam and tighten the nuts and bolts. Repeat this step for the driver side. **Picture #5 & #6**

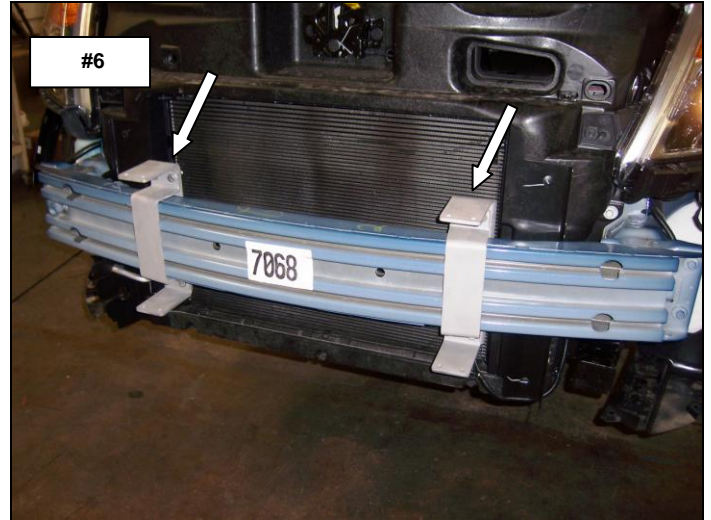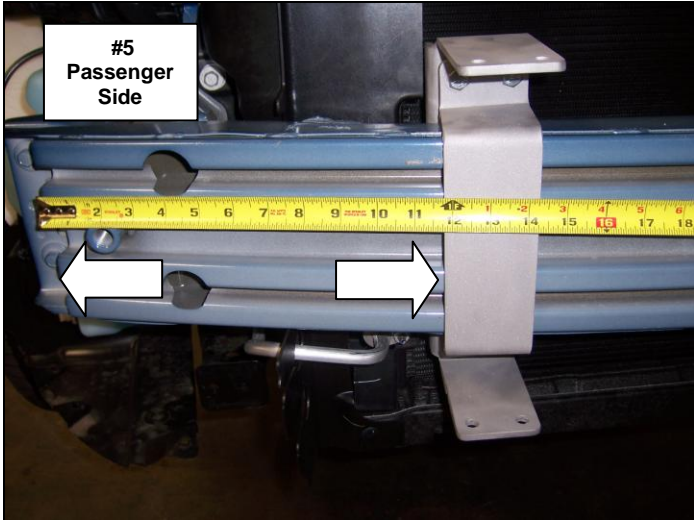


Step-2 An area in each side of the lower grille must be cut out for the lower leg of the main bracket to extend through. Measure, cut and remove the outlined area from the lower grille as shown. **Picture #7**


Step-3 Reinstall the bumper fascia reversing the above steps. **Picture #8**

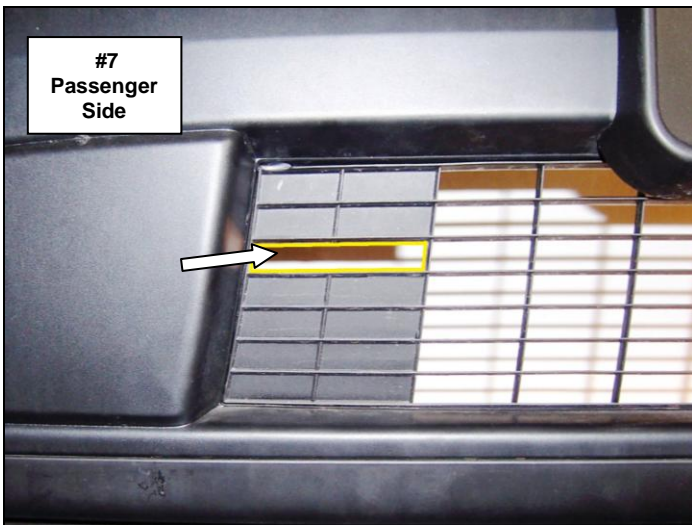

Step-4 Attach each of the passenger side extension brackets to the main bracket using (2) 3/8" x 1" hex bolts, (2) 3/8" lock washers and (2) 3/8" hex nuts. Leave the nuts and bolts loose for final adjustment. Repeat this step for the driver side. **Picture #9 & #10**

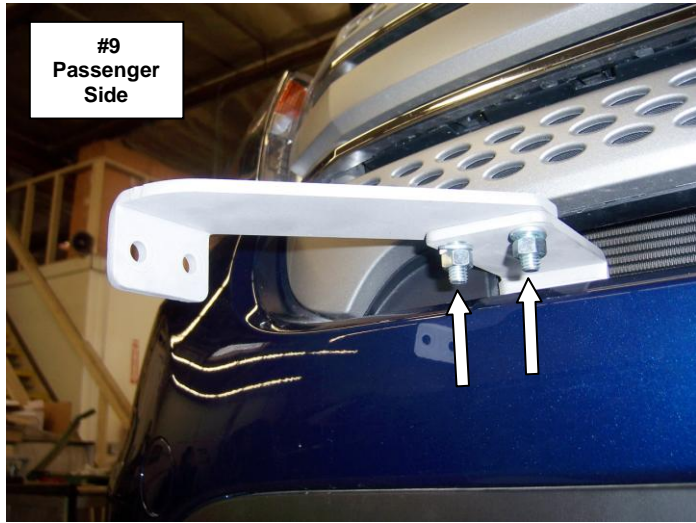


#9
Passenger
Side

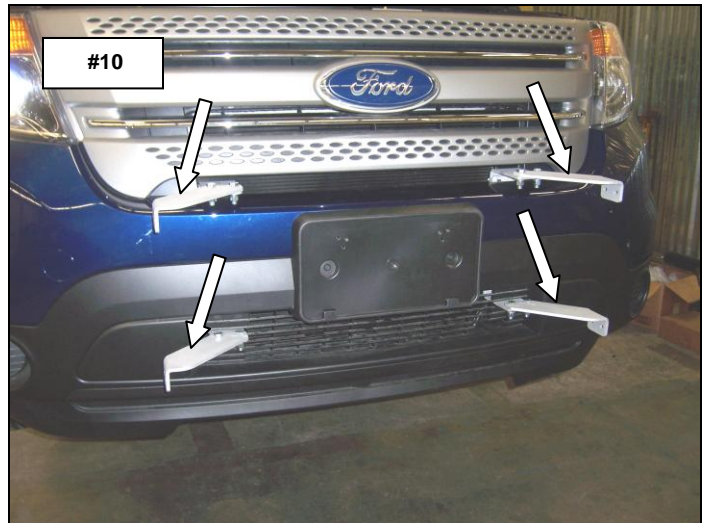


#10

Step-5 Attach the push bumper to each of the extension brackets using (2) 3/8" x 1" hex bolts, (2) 3/8" lock washers and (2) 3/8" hex nuts. Leave the nuts and bolts loose for final adjustment. **Picture #11 & #12**

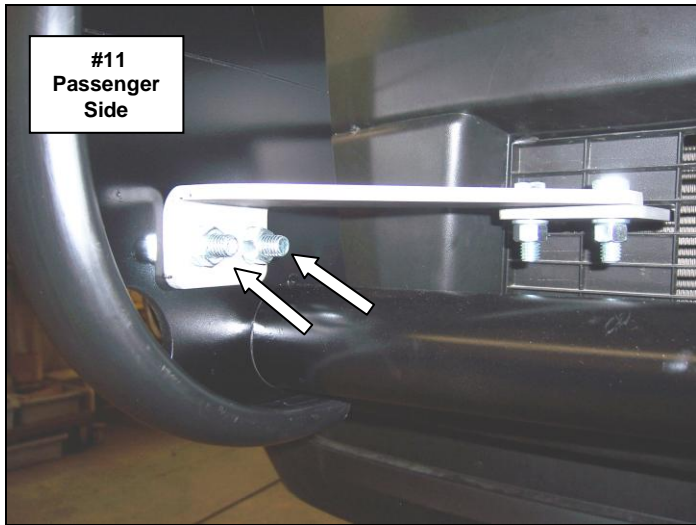

#11
Passenger
Side

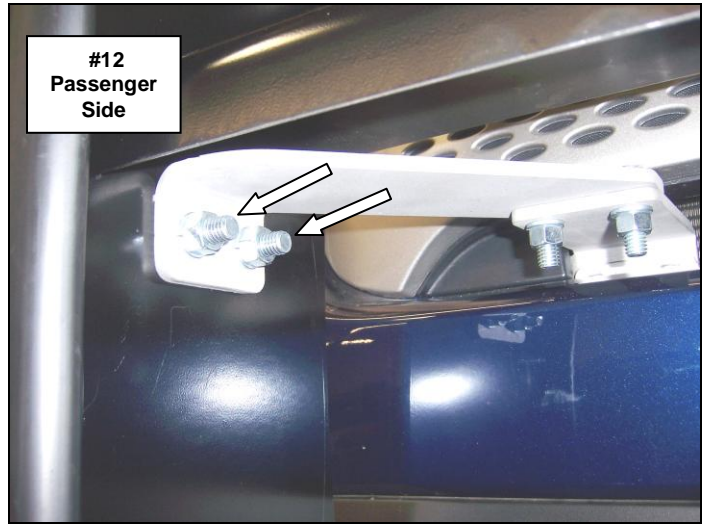

#12
Passenger
Side

Step-6 Align the push bumper with the vehicle and tighten all nuts and bolts. **Picture #13 & #14**



#13



#14