




Installation Instructions
Road Defender Rear Window Bars Part Number 571433
2011-2016 Dodge Charger Pursuit

Parts List				Tools Required
Item	Qty.	Part No.	Description	
1	1	5714331	Driver Side Window Bar	#2 Phillips Driver Bit
2	1	5714332	Passenger Side Window Bar	Drill Motor
3	22		#8 x 3/4" Self Drilling Screw	Spring Clamps

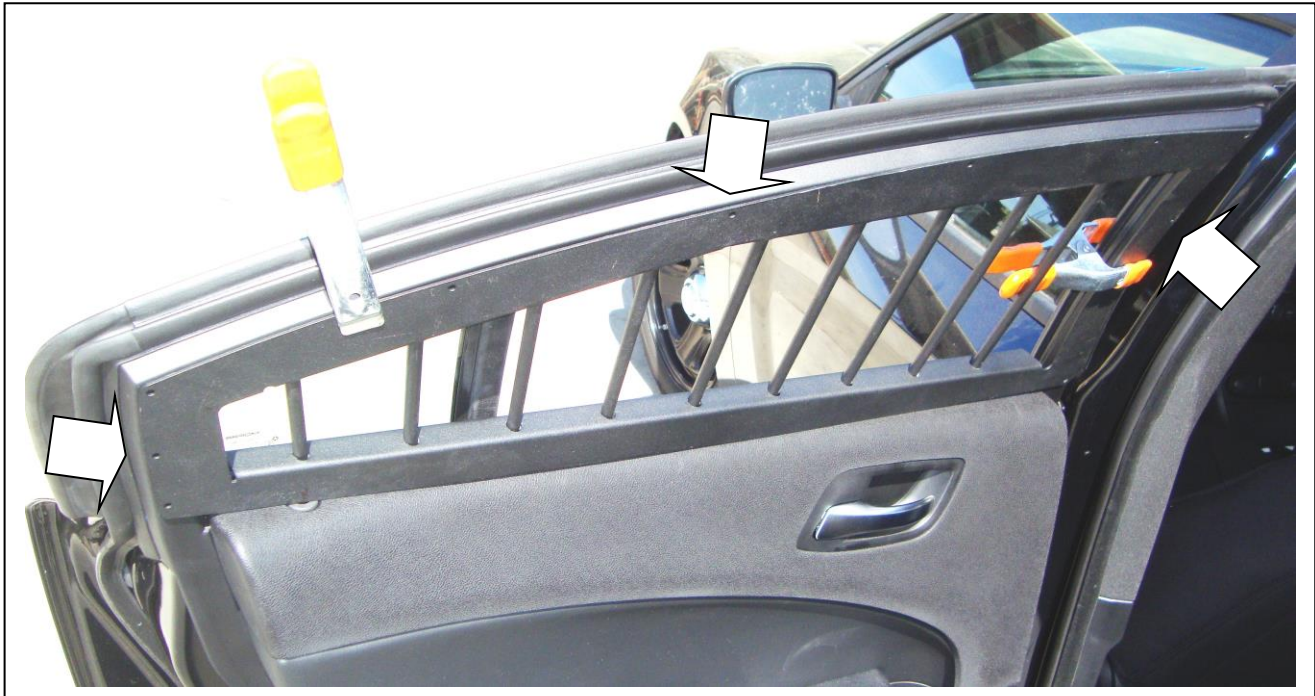

IMPORTANT INSTALLATION NOTES AND SUGGESTIONS



Go Rhino Window Bars are not compatible for vehicles with visible rear door lock pull knobs / plungers.

To maintain and care this product keep it clean and do not use abrasive cleaners or polish waxes. Texture Painted Finish: Mild liquid detergent may be used.

Read the installation instructions completely and verify that all of the parts listed are accounted for. If you have defective, missing or damaged parts or need assistance, please contact Go Rhino Products for fast, friendly customer service at: (888) 427-4466 or email: sales@gorhino.com

Installation

Step-1 Open the driver and passenger side rear doors and roll down both rear windows.

Step-2 Beginning with the driver side position and align the window bar mounting frame with the door frame.

Step-3 With the window bar clamped in place, install the self-drilling screws starting at the bottom on each side first, and then work up each side to install the remaining screws. Repeat step 2 & 3 for the passenger side.