


Installation Instructions

Road Defender Brush Guards Part # 5296W

2018 - 2019 Ford F-150 Police Responder

Do not attempt to install this product on any vehicle other than the one listed above!

Parts List				
Item	QTY	Code	Description	Max Torque
1	1 set	5296W	Brush Guards	
2	8 pcs		3/8 x 1 1/4" hex head bolt	30 Lb. Ft.
3	8 pcs		3/8" lock washer .	
4	8 pcs		3/8" nut	30 Lb. Ft.

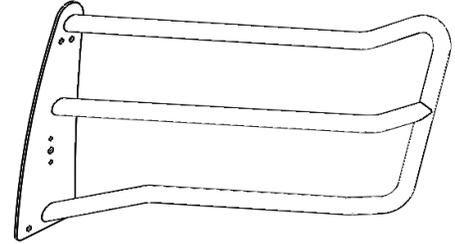

Tool Required:

9/16" & 3/4" Wrench
Ratchet & 5" Ratchet Extension

Approximated installation time: 60 min.

Read the installation instructions completely and verify that all of the parts listed are accounted for. If you have defective, missing or damaged parts or need assistance, please contact *Go Rhino Products* for fast, friendly customer service at: 1-888-427-4466 or email: warranty@gorhino.com

To maintain and care this product keep it clean and do not use abrasive cleaners or polish waxes. It is recommended to use only non-abrasive automotive wax such as pure carnauba to avoid scratches and rust.

1. Attach the passenger side brush guard to the push bumper using (4) 3/8" x 1 1/4" hex bolts, (4) 3/8" lock washers and (4) 3/8" hex nuts. Leave the nuts and bolts loose for final adjustment. (Photo 1).
2. Repeat to install driver side brush guard.

Image 2



3. Align the push bumper and brush guard assembly and tighten all nuts and bolts securing the push bumper, brush guard assembly and brackets, (Photo 2).



12. Periodically it may need re-tighten the bolts and nuts

