


INSTALLATION INSTRUCTIONS
Intersection Light Brackets (Soundoff Signal nForce) 515100T
Universal

Do not attempt to install this product on any vehicle other than the one listed above!

PARTS LIST

ITEM	QTY.	PART #	DESCRIPTION	TORQUE
1	2 Pc	507747510CA	Lateral lights bracket	-
2	1 Set	KTE-G515100	Hardware bracket kit	-
3	4 Pc	-	1/4 x 3/4" Bottom head bolt	10 Ft. Lbs.

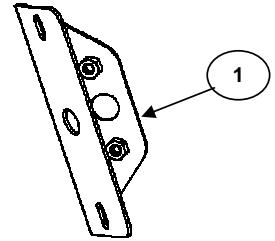

TOOL REQUIRED:

5/32" Allen wrench
 5/16" Drill bits
 Drill

Approximate installation time: 25 min.

Read the installation instructions completely and verify that all of the parts listed are accounted for. If you have defective, missing or damaged parts or need assistance, please contact Go Rhino Products for fast, friendly customer service at: 1-888-427-4466 or email: warranty@gorhino.com

It is the customer's responsibility to protect the finish with a regular application of a nonabrasive polish compatible with the products finish.

INTERSECTION LIGHT BRACKETS INSTALLATION.

Step-1 Place the bracket on the plate where you want to install the light.

Step-2 Mark the center of the nuts. **See illustration 1.**

Step-3 Remove the bracket and drill with 5/16" drill bit 5/16". **See illustration 2.**

Step-4 Install the bracket and attach with 1/4 x 3/4" bottom head bolt. **See illustration 3.**

Step-5 Install the light Soundoff Signal nForce.

Step-6 Repeat for the other side.

